


ID-PARA

For more precision, the **ID'PARA** guides your implant setting.

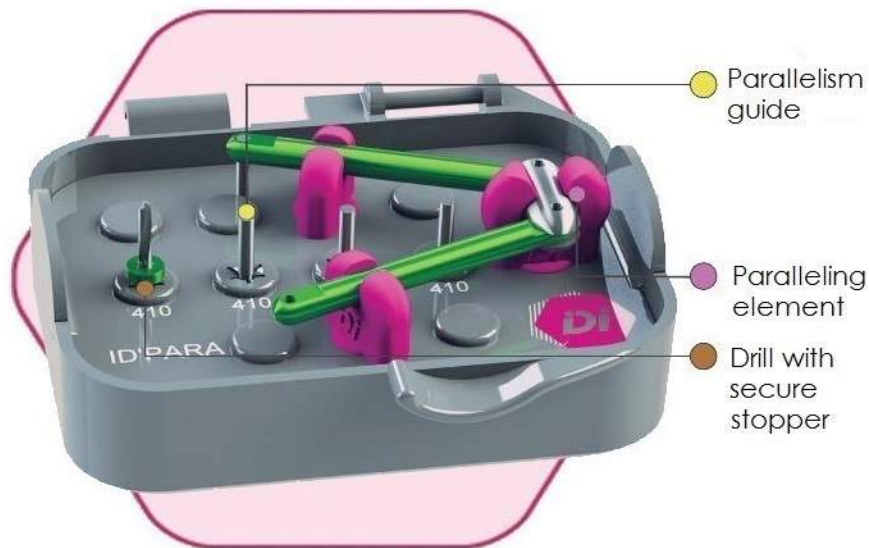

Indication :

For the placement of the implants in a paralleling way to maximize the prosthesis stability and the life of the prosthetic attachments.

Instructions



Step 1 :

Drill perpendicular to the basis



Step 2 :

Insert a parallelism guide into the socket and place one rod of the paralleling element above it.

Position the second rod above the place intended for the second implant to be inserted.

Drill through the hole of the paralleling element.